

VINnie

		XP5	
	←	Цепь	
+5V ←	1	1	+5V
	2	2	GND
+3V3D ←	3	3	+3V3
	4	4	GND
RTC_ALARM	5	5	ALARM
EXT_WU	6	6	EXT_WU
P2.7	7	7	P2.7
P2.6	8	8	P2.6
P0.10/USER_BTN	9	9	P0.10 BTN
P0.9/USER_LED	10	10	P0.9 LED
P0.8	11	11	P0.8
P0.7	12	12	P0.7
P0.6	13	13	P0.6
P0.5	14	14	P0.5
P0.4	15	15	P0.4
P0.3	16	16	P0.3
P0.2	17	17	P0.2
P0.1	18	18	P0.1
P0.0	19	19	P0.0
	20	20	GND

DS1021-1x20SF11-B

		XP6	
	←	Цепь	
+5V ←	1	1	+5V
	2	2	GND
+3V3D ←	3	3	+3V3
P10	4	4	P10
P11	5	5	P11
P12	6	6	P12
P13	7	7	P13
P14	8	8	P14
P15	9	9	P15
P16	10	10	P16
P17	11	11	P17
P18/MC_UART_RX	12	12	P18 UART RX
P19/MC_UART_TX	13	13	P19 UART TX
P110	14	14	P110
P111	15	15	P111
P112	16	16	P112
P113	17	17	P113
P114	18	18	P114
P115	19	19	P115
	20	20	GND

DS1021-1x20SF11-B

3				
Изм.	Лист	№ докум.	Подп.	Дата
Разраб.		Нечаев		
Пров.				
Т.контр.				
Согл.				
Н.контр.				
Утв.				

Лум.			Масса		Масштаб	
Лист 1			Листов 1			